

 
KEY HOLE A

USE THIS TEMPLATE
TO DETERMINE THE POSITION OF
TELEPHONE ON WALL,
AND WHERE TO LOCATE
SCREW HOLES.

REMOVE TEMPLATE FROM
WALL BEFORE INSERTING
PLASTIC ANCHORS OR SCREWS

USE ONLY FOR WALL
INSTALLATION OF TELEPHONE SET

KEY HOLE B

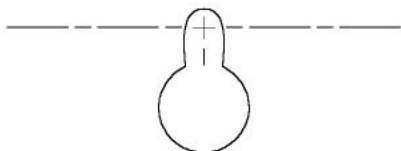

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions, should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:


1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not place this product where the cord will be abused by persons walking on it.
9. Some telephones require AC power from the outlet. Do not overload wall outlets or extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into the product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceman if service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled on the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

CROSLEY

CR92

 Country Kitchen Phone

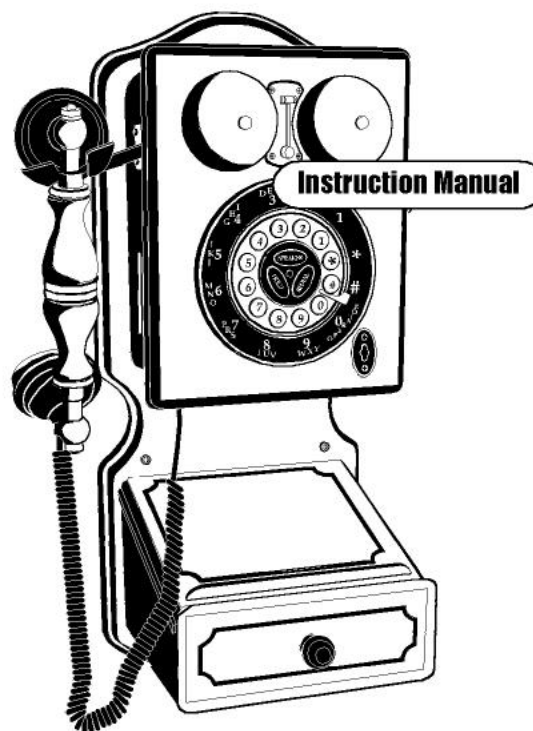

WARRANTY

Crosley Radio Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale to the original purchaser.

Should the unit fail under normal usage during the 90 day warranty period, a request for RETURN AUTHORIZATION (R.A.) must be made by the original customer before returning the unit. Call Crosley Radio customer service for Return Authorization at (502) 583-4246 from 9 AM to 5 PM (EST) Monday to Friday.

Upon receiving the RETURN AUTHORIZATION number from the Customer Service Department, properly pack your unit in its original packaging. Include any adapters, parts, & accessories which were originally provided with the product, along with a check or money order for \$19.95 made out to Crosley Radio to cover the handling and return postage. Display the R.A. # on the outside of the carton and ship PREPAID via standard UPS or its equivalent.

**CROSLEY
-RADIO-**

ATTN: RETURNS DEPT
2001 PRODUCTION DRIVE
BAY 2 & 3
LOUISVILLE, KY 40299

CROSLEY RADIO assumes no responsibility for units sent without prior Return Authorization.

The purchaser's bill of sale is the only proof of warranty entitlement and must accompany the unit.

The warranty does not cover damage due to acts of nature, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Crosley Radio to service the product. This warranty does not cover products sold AS IS or consumables (such as fuses or batteries). This warranty is valid only in the United States.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the 'Moss-Magnuson Warranty Act' of July 10, 1975, this is termed a 'limited warranty' which in no way compromises Crosley Radio, high standards of Quality and Workmanship.

SET UP

DIAL MODE

Locate the DIAL MODE switch on the rear of the telephone body. Slide the switch to Tone unless you have Dial-Pulse (Rotary) telephone service in your area in which case, slide the switch to the PULSE position.

RINGER CONTROL

The RINGER CONTROL switch is on the rear of the telephone body. It allows you to turn the ringer OFF or set it to ring at either LOW or HIGH volume. You can still make or receive calls with the ringer in the OFF position, however, you will not hear the incoming ring.

RECEIVER VOLUME

The RECEIVER VOLUME CONTROL switch, located on the rear of the telephone body, allows you to adjust the volume of the receiver earphone from LO and HI.

HANDSET CORD

To assemble, insert one end of handset cord into the HANDSET CORD JACK and the other end to the HANDSET CORD JACK located on the left side of the telephone body.

INSTALLATION

MODULAR WALL JACK

To install the telephone directly on a modular wall jack :

1. Connect the 15 inch line cord to the LINE CORD jack on the rear of the telephone body.
2. Tuck the line cord into the channel on the cabinet rear.
3. Peel and stick the rubber pads on rear of telephone cabinet in designated areas.
4. Hold the telephone body up next to the modular jack and plug the line cord into this jack.
5. Tuck the excess line cord into the recess provided on the rear of the telephone body.
6. Line up the mounting holes of the telephone body with the mounting studs (screw heads) on the modular jack or wall.
7. Push the telephone body against the wall jack and down until it is held securely in place by the mounting studs.

WALL

If you are not mounting directly onto a modular wall jack, proceed as follows :

1. Install the 7 foot line cord into the LINE CORD jack on the rear of the telephone body. If the desired location is further than 7 foot from a wall jack, you will have to obtain a longer line cord available at most hardware stores.
2. Place the provided TEMPLATE against the wall in the position desired.
3. Mark the wall by poking either a pen or pencil through the indicated spots on the template.
4. If there is no stud at this location, it will be necessary to install the provided wall anchors. Drill a small pilot hole at the marked locations. Tap the anchors into the holes. Then insert screws, but DO NOT TIGHTEN. Leave the screw heads protruding about 1/4 inch.
5. If there is a stud at this location, simply install the two screw into the stud. REMEMBER. Leave screw head protruding.
6. Telephone is then mounted according to procedure detailed in MOUNTING TO MODULAR PLUG.

NOTE: If you encounter difficulty fitting the telephone body onto the screw, or the telephone wobbles when installed, either tighten or loosen the screws to adjust.

TO INSTALL WALL ANCHORS

If the location you have chosen to mount your telephone is a hollow wall without any beams you will have to use the included wall anchors.

To install, place the template against the wall where you wish to place your telephone. Mark the wall at the location of the two + on the template by pushing a pen or pencil through the template. Drill a 1/4" hole at each mark.

 
Push the wall anchor into the hole and gently tap until it is flush with the wall.

With a phillips screwdriver, begin tightening the screw. CLOCKWISE. Stop turning when you feel firm resistance.

Turn the screw counter clockwise until the screw head is about 1/4" out of the wall.

Install the 7 foot line cord at back of the telephone. Adjust the switches to your preference. Position the line cord through the slot on the bottom of the cabinet. Line up the holes with the two screws. Place the telephone onto these two screws and gently pull down.

This may require a little fine tuning until the phone is seated securely.

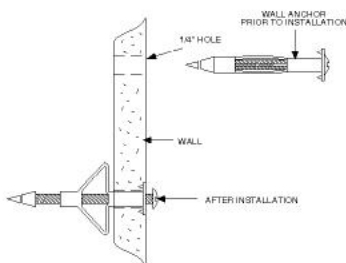

INSTRUCTION TO USE FCC Registration Information

This equipment complies with Part 68 of the FCC rules. On the lower side of the equipment is a label that contains, among other information, the FCC registration number and the Ringer Equivalence Number (REN) for this equipment. If requested, provide this information to your telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line. Excessive REN's on the telephone line may result in the devices not ringing in response to an incoming call. In most areas, but not all areas, the sum of the REN's should not exceed five (5.0). To be certain of the number of devices you may connect to your lines, as determined by the REN, you should call your local telephone company to determine the maximum REN for your calling area.

If your telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

MAKING AND ANSWERING CALLS

To get a dial tone or answer an incoming call, lift the handset. To hang up, either replace the handset or simply press the HANDSET CRADLE.

IN CASE OF DIFFICULTY

If you are having problems with your telephone, try the following suggestion.

NO DIAL TONE

1. Make sure that all plugs are connected properly. Check the connections at the wall jack, the telephone cabinet and handset.
2. Try another modular jack within your home which you know to be working properly.

CALLS CANNOT BE DIALED OR DIALED SLOWLY

Check to make sure that the DIAL MODE switch is in the correct position for the type of service available in your area.

TELEPHONE DOES NOT RING

Check that RINGER CONTROL switch is not set to OFF. If there are several telephones connected to the same line, try disconnecting some of the other telephones. Having too many telephones connected to the same line can cause low ringer volume or poor sound quality during calls.

CARE AND MAINTENANCE

Avoid rough treatment to the telephone. Do not drop the handset and always replace it gently onto the cradle.

Clean only with a cloth slightly dampened with water only. Do not use detergent, waxes, solvent, spray, alcohol or excessive water.

HOLD LINE (MUTE)

If you want to talk privately to someone else in the room without the distant party hearing you, you can press hold button once. You will still be able to hear the distant party, but anything you say will not be heard. When you press the button again, the distant party will be able to hear your voice again.

ANSWERING CALLS WITH SPEAKER

Press Speaker button when the phone rings. You can adjust the suitable volume level by sliding Speaker HI/MID/LOW switch.

Changing answering method from Handset to Speaker. Press Speaker Button and place the handset back on the cradle simultaneously.

LAST NUMBER REDIALING

The last number dialed can be redialed using either speaker-phone or the normal telephone. This is especially useful if the dialed line was busy. Press the redial button so the unit will automatically redial the last dialed number.

PARTS INCLUDED

Your new telephone includes the following items:

- | | |
|-------------------------|---|
| 1 - Telephone handset | 2 - Screws with wall anchors |
| 1 - Handset coil cord | 1 - Wall mounting template. |
| 1 - Telephone body | 4 - Rubber spacer pads. |
| 1 - 7 Foot line cord | 2 - Tapping screw |
| 1 - 15 Inches line cord | 1 - Template (See above picture and instructions) |

LOCATION OF PARTS

